

How to Remove & Replace Resin/Media from an Old Unit -

- 1.) Put the unit into the "Bypass" mode.
- 2.) Start a Manual Regeneration/Backwash of the unit. This will release the water pressure inside the resin tank. (You should see or hear a spurt of water go down your drain line from the control valve.)
- 3.) Unplug the unit from your home electric.
- 4.) Disconnect the control valve from the Bypass Valve or your home plumbing, and move the unit out to an open area, where you will have room to work.

For the complete document, please contact us at 888-644-6426!