


How to Determine which OPWS1 (Clack) Valve Connection I need

If you have a 3-Valve Bypass already plumbed in your water lines, then you will only need a pair of Clack Connectors that will provide a connection between your home plumbing and the OPWS1 Control Valve.

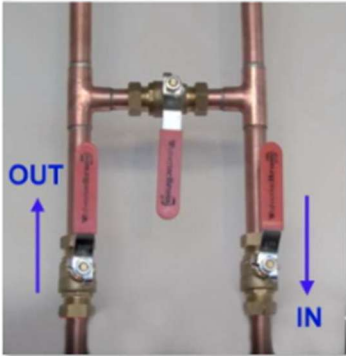

We offer three (3) types of Clack PVC Connectors as shown below



Elbow Connectors (Most Popular)



Straight Connectors



Shark-Bite Connectors

If you don't have a 3-Valve Bypass plumbed in your water lines, then you will need to select the Clack Bypass Valve, shown below, along with one of the Clack Connectors shown above.

